


Connector 1: High density 44P Male

Connector 2: BNC Female
See next page PE4076

Metal Hood: 3020-15 (Long Thumbscrew) with Biggest OD

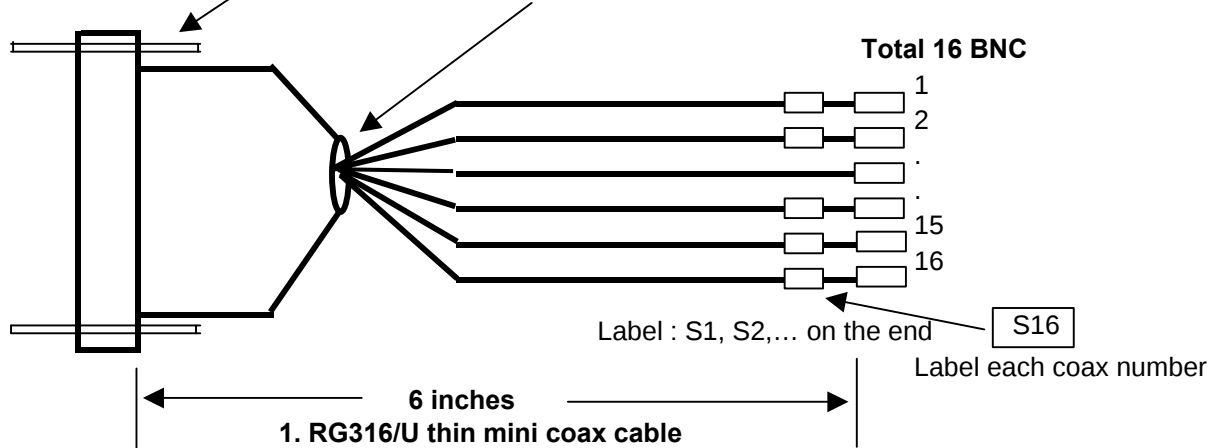


Pin outs 1-44 in order (G=GND, S=Coax center Signal #, O=Open):

High density Male 44 position Crimp type

1:O,
 2:S1, 3:G, (Cable S1)
 4:S2, 5:G, (Cable S2)
 6:S3, 7:G, (Cable S3)
 8:S4, 9:G, (Cable S4)
 10:S5, 11:G, (Cable S5)
 12:S6, 13:G, (Cable S6)
 14:S7, 15:G, (Cable S7)
 16:S8, 17:G, (Cable S8)
 18:S9, 19:G, (Cable S9)
 20:S10, 21:G, (Cable S10)
 22:O,
 23:S11, 24:G, (Cable S11)
 25:S12, 26:G, (Cable S12)
 27:S13, 28:G, (Cable S13)
 29:S14, 30:G, (Cable S14)
 31:S15, 32:G, (Cable S15)
 33:S16, 34:G, (Cable S16)
 35-44:O



MATERIALS

BODY	BRASS NICKEL PLATED
CONTACT	GOLD PLATED
INSULATOR	PTFE

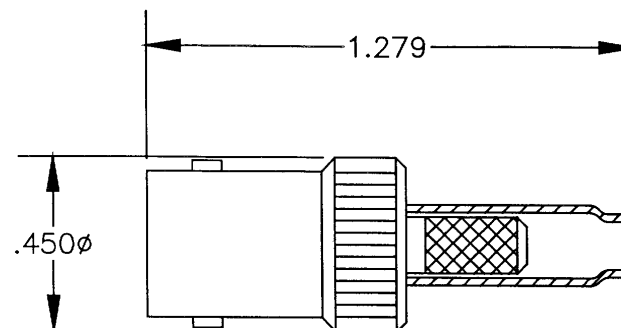

ASSEMBLY PROCEDURES

1. STRIP CABLE AS SHOWN & SLIDE FERRULE (1) ONTO CABLE.
2. FLARE END OF CABLE BRAID & SLIDE METAL SPACER (2) & PTFE (3) SPACER OVER CABLE DIELECTRIC.
3. THE CONTACT (4) SHOULD BUTT AGAINST THE DIELECTRIC & PTFE SPACER. CRIMP CONTACT TO CABLE CENTER CONDUCTOR.
4. INSTALL CABLE ASSEMBLY INTO BODY SO THAT THE INNER FERRULE PORTION OF BODY SLIDES UNDER BRAID. PUSH CABLE ASSEMBLY FORWARD UNTIL CONTACT SNAPS INTO PLACE. SLIDE FERRULE OVER BRAID AND UP AGAINST CONNECTOR BODY & CRIMP.

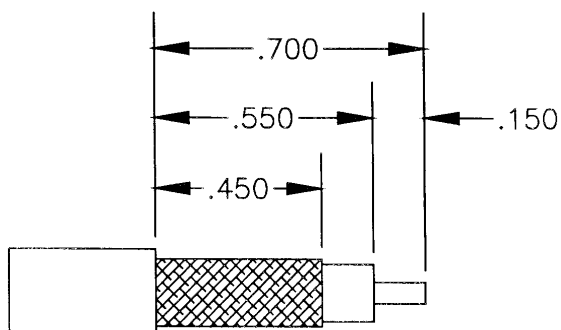

STRIPPING DIMENSIONS

CRIMP SIZES REQUIRED

CONTACT: .068" HEX CRIMP TOOL
FERRULE: .178" HEX CRIMP TOOL



PASTERNAK ENTERPRISES, LLC

P.O BOX 16759, IRVINE, CA 92623
PHONE (949) 261-1920 FAX (949) 261-7451

WEB ADDRESS: www.pasternack.com
E-MAIL ADDRESS: sales@pasternack.com

COAXIAL & FIBER OPTICS

DWG TITLE

PE4079

DES.

BNC FEMALE, CRIMP ATTACHMENT FOR
RG174, RG188 & RG316

SIZE A

FSCM NO. 53919

CAD FILE 040902

SCALE N/A

127

NOTES:

1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL.
2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.